


## **Typical Fastening Detail for Top & Bottom Rails to Posts**

Residential installation only. Commercial applications may differ. Always check with local building codes prior to purchasing and installing this product.

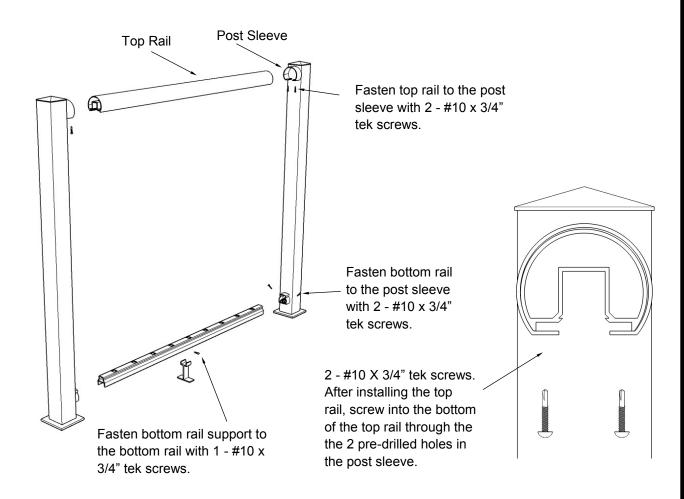

2 - #10 X 3/4" tek screws. After installing the bottom rail, screw through the middle of the angled sides of the bottom rail sleeve. Pre-drilling may be required.

